



# Disrupting thermal bridging

The purple color (bad) is the studs and framing. The gold color (good) is the wall insulation. You can easily see the studs, that is thermal bridging. The framing is colder than the insulation.

The Test Wall it's hard to see where the studs are because they are about the same temperature as the insulation. Very little thermal bridging is happening.

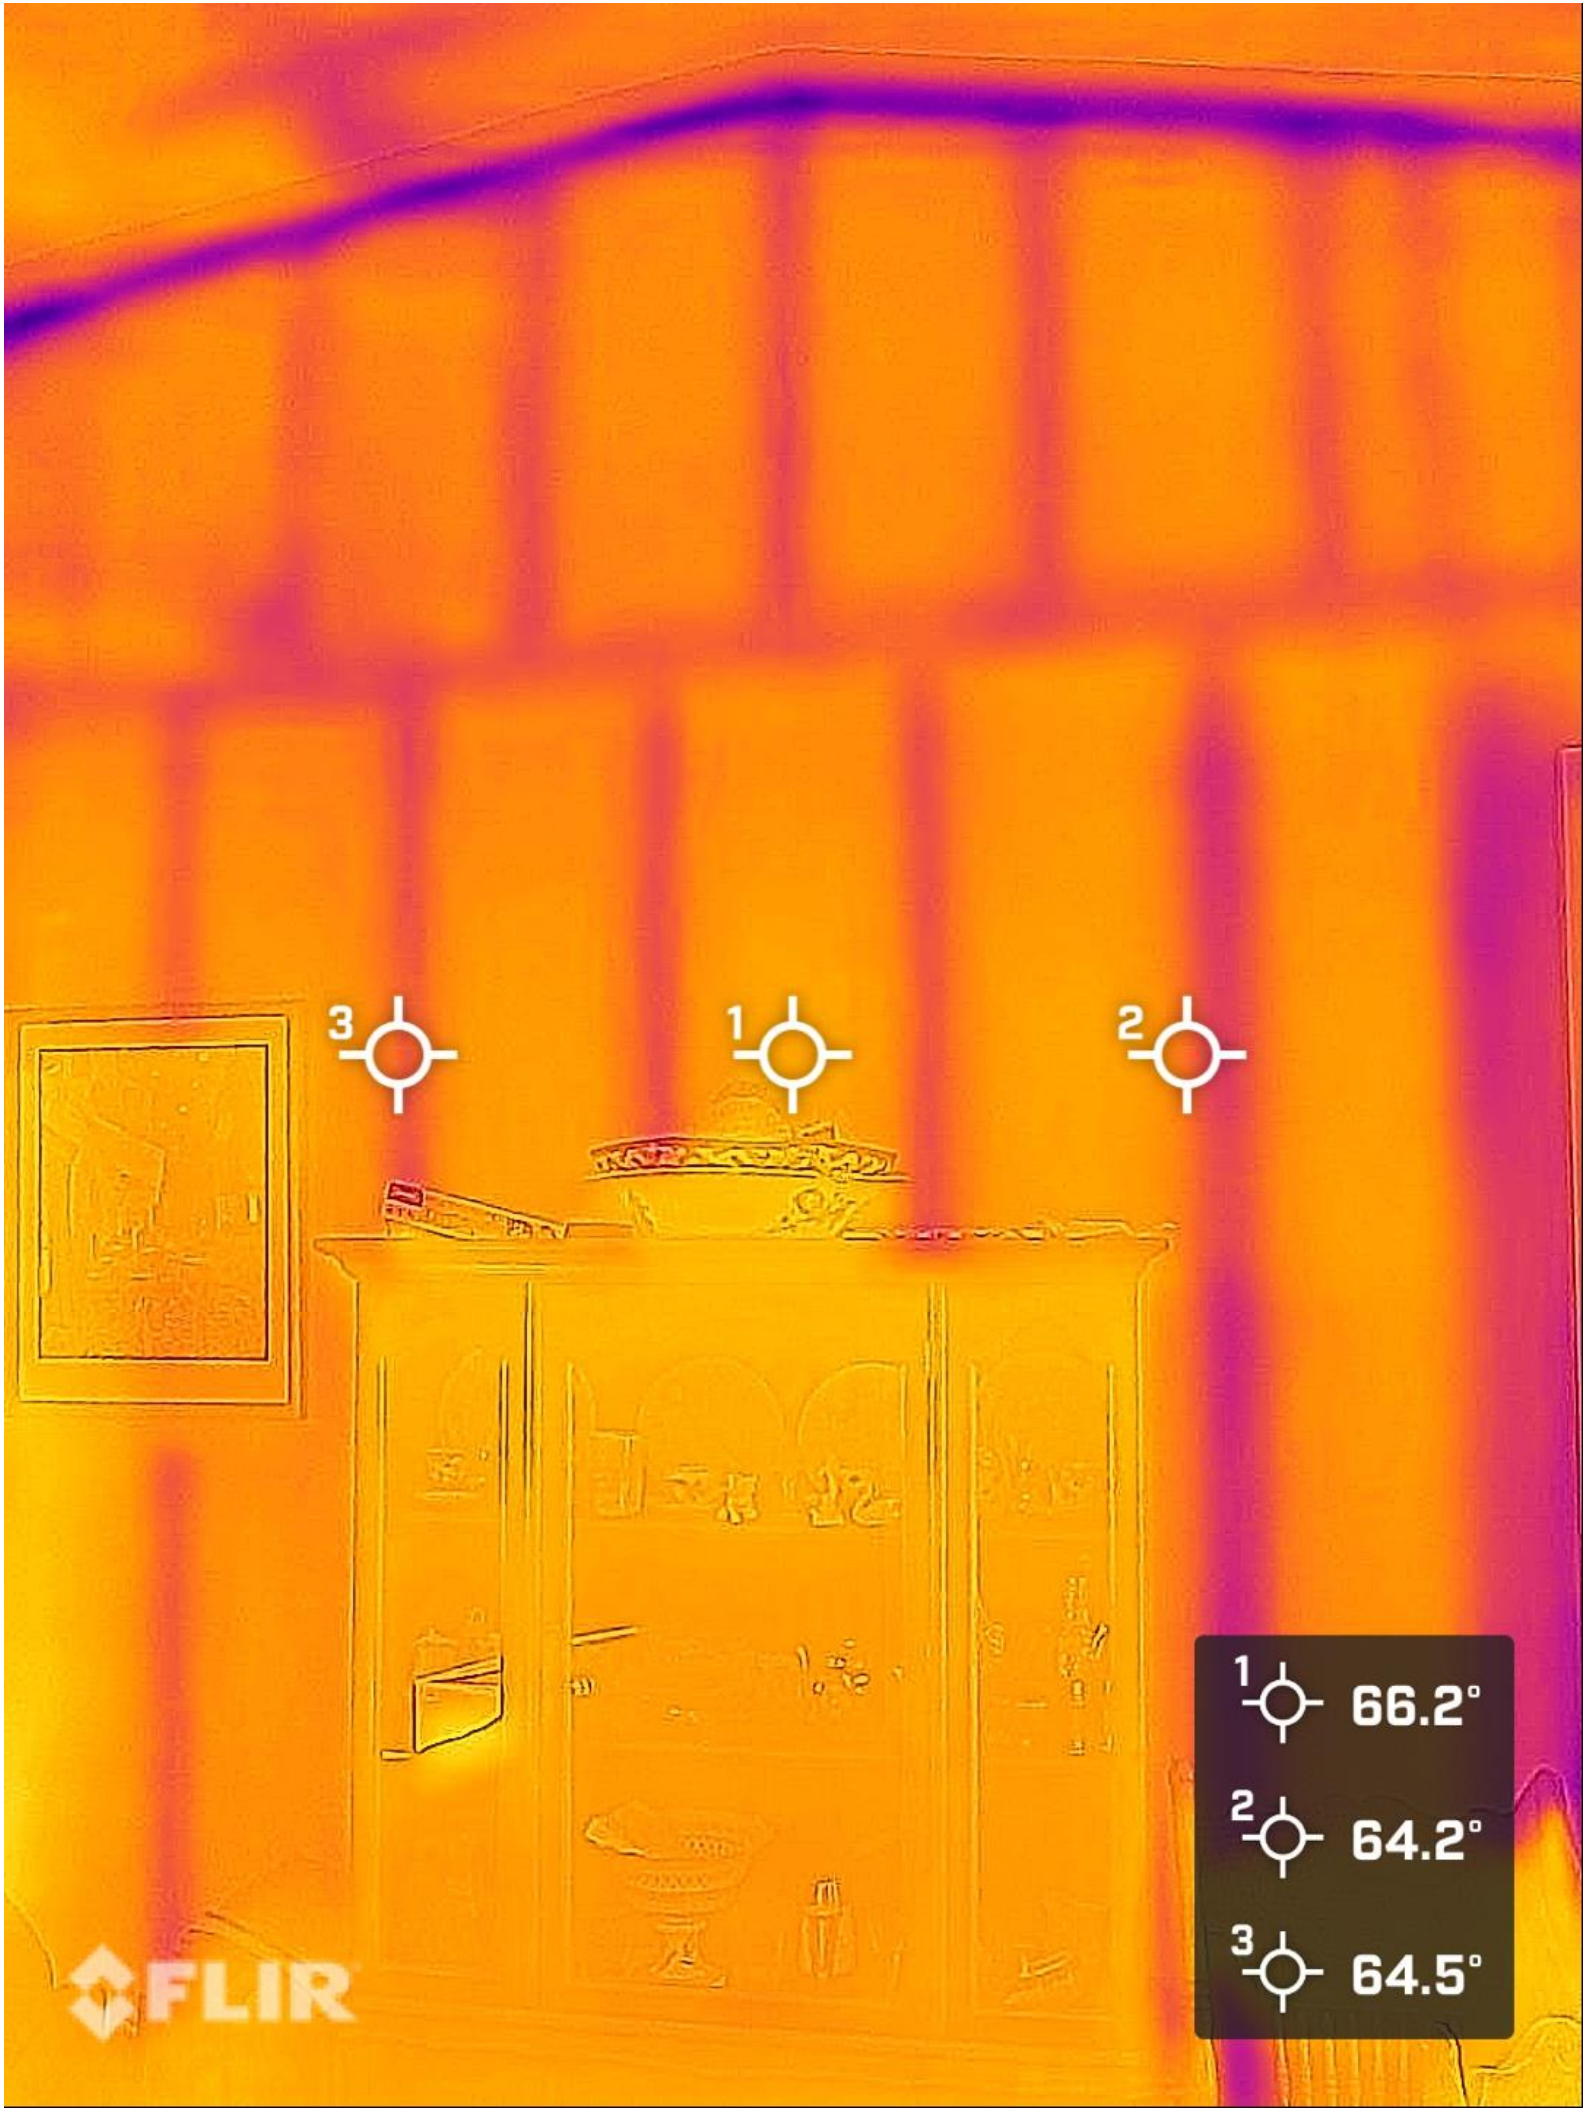

**Standard Wood Stud Wall**

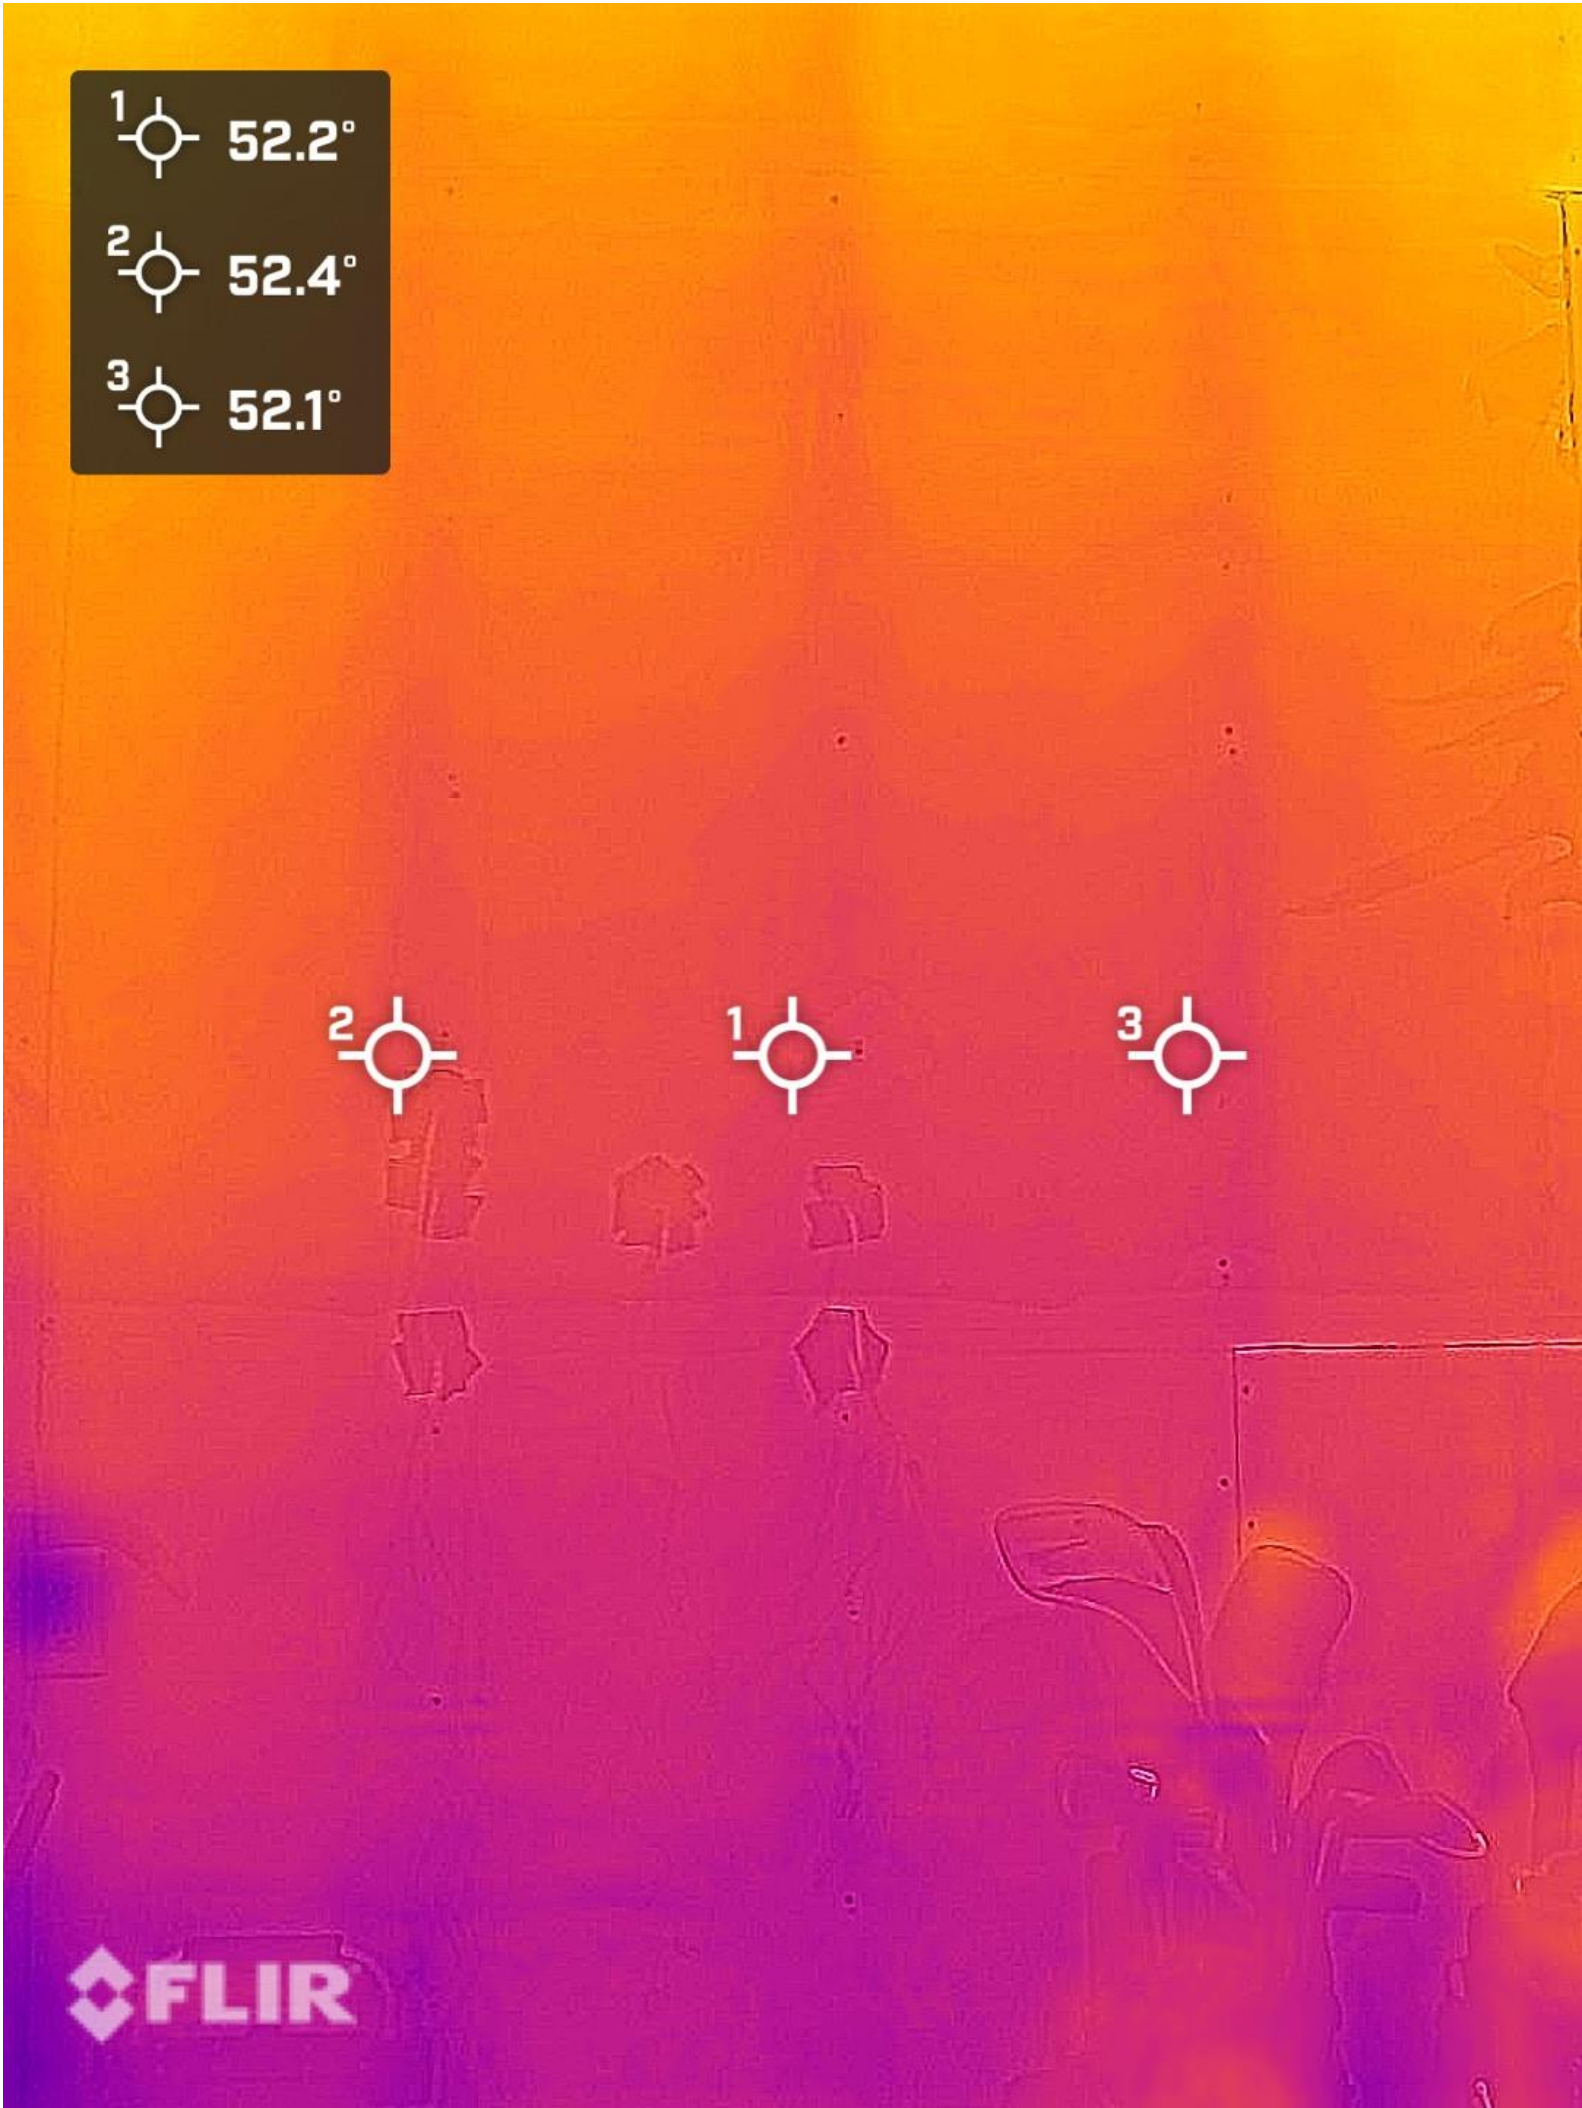

**EcoSmart™ Test Wall**